


## How to replace one 5500-5420 knob with another

**Note:** Enclosed you will find 5500-5420 knobs and socket screws.

The early versions of the 5500-5420 knobs have spring clips holding them in place. These version are no longer available. The newer versions have socket screws holding them in place.

---



**Step 1:** Pry off old knobs to expose the switch hub, and, using a 1/8" allen wrench, remove the short socket screw.

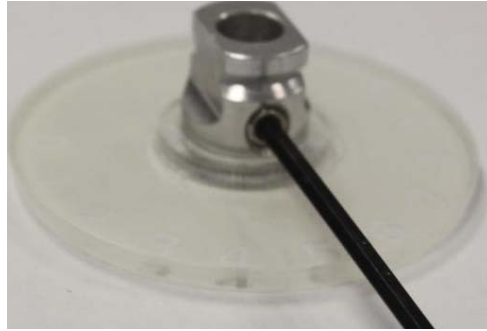

*Note: if you have the newer knobs, you have to remove the socket screw before you pry off the knob.*

---

**Step 2:** Align the hub with the new knob, slide it on, and secure using a 1/8" allen wrench and the supplied socket screw.

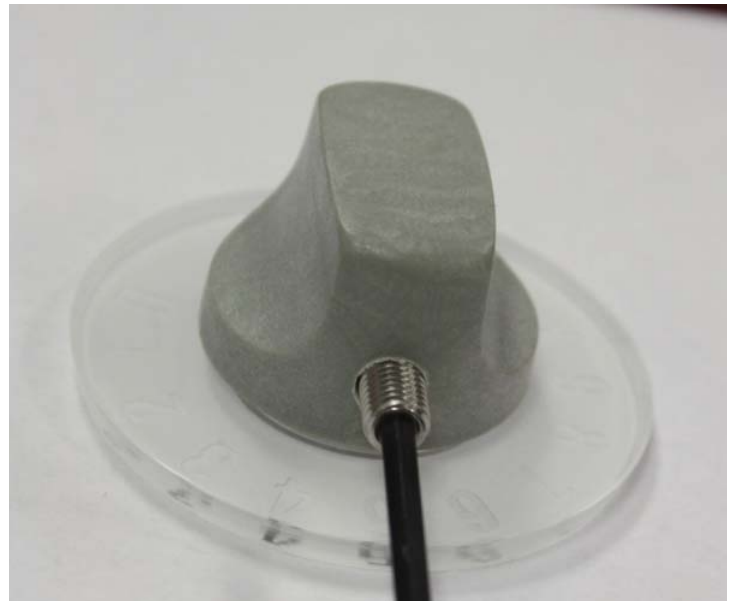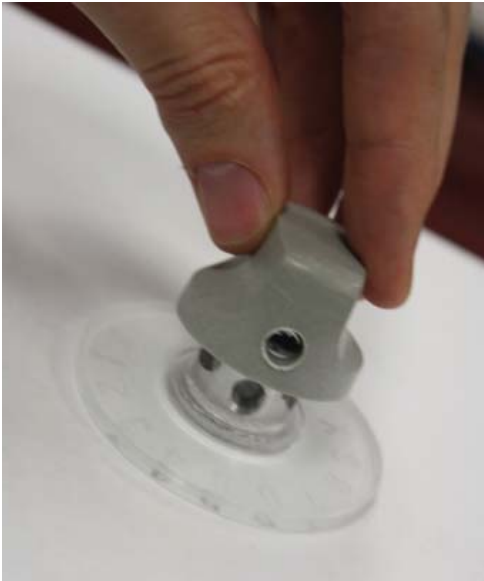

IET LABS, INC.

CAGE CODE: 62015

• (516) 334-5959 • (800) 899-8438

[www.ietlabs.com](http://www.ietlabs.com)

Page: 1 of 1

How to replace one 5500-5420 knob with another/05-13-2013